

# Pearl Concert Bass Drum Stand CBS-80


## Instruction Manual

Congratulations on your purchase!


To get optimum performance of your CBS-80 Concert Bass Drum Stand, please read this Instruction Manual before playing.

### Assembling



1. Join the left and right Support Tubes with the Connecting Tubes and tighten the Mounting Screws with the provided hexagonal wrench.

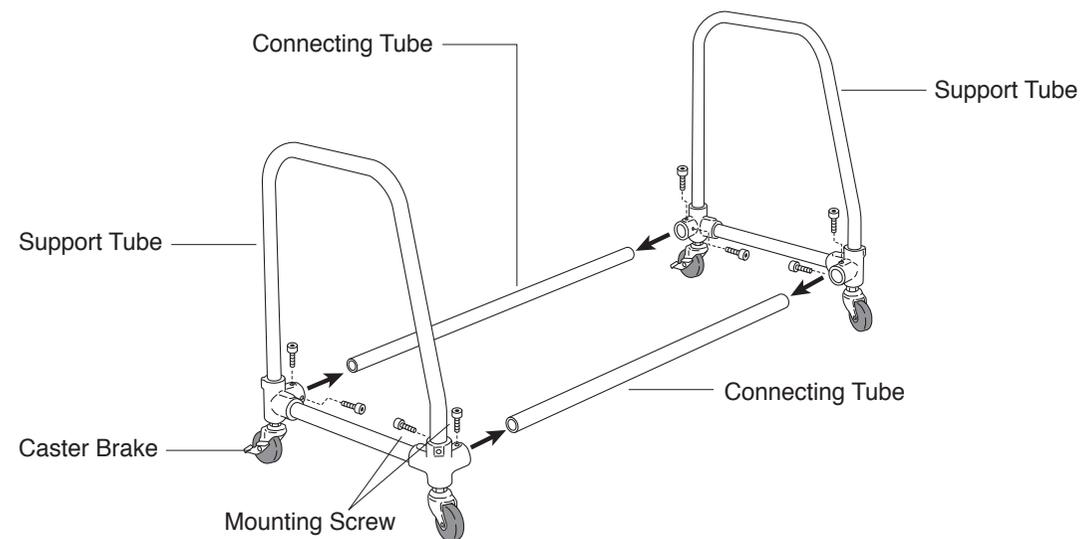


2. Remove the Wing Nut (B), Washer, and Bolt as shown from the Mounting Brackets that are attached to your Bass Drum.

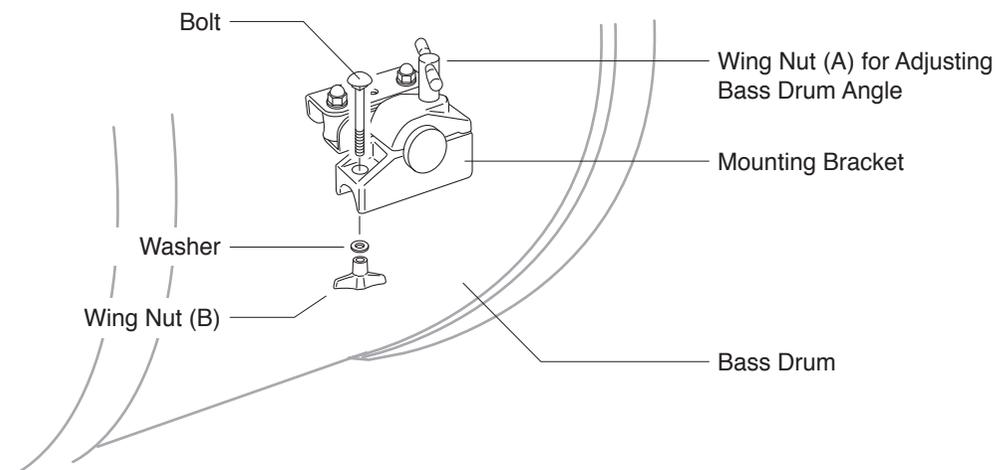

3. Use two people to lift the Bass Drum between the two Support Tubes as shown (for safety, it is recommended that another person help with Step 4 below).

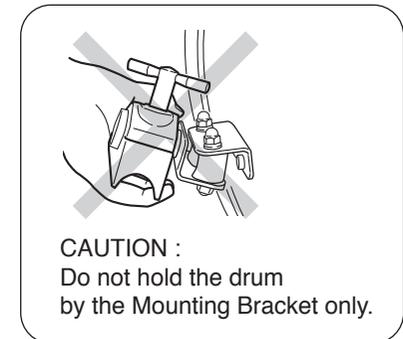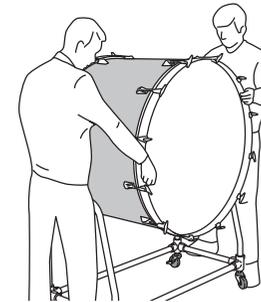

4. Carefully set the Mounting Brackets onto the Support Tubes and align the bolts with the holes. Push the Bolts through the holes then secure with the Washers and Wing Nuts (B).

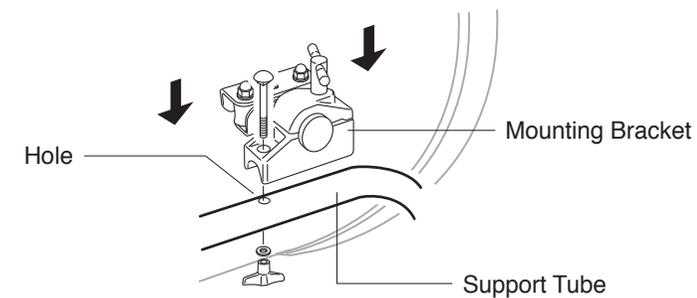

### ALTERNATIVE ASSEMBLY METHOD:

The CBS-80 can be assembled onto the Bass Drum with the Bass Drum lying on the ground. It is highly recommended that two or more people assist in setting-up then lifting the Bass Drum / CBS-80 to the upright position.

### CAUTION :

- \*Do not overtighten Wing Nut (A) when adjusting the Bass Drum angle.
- \*The Bass Drum is suspended with rubber elastomers and can bounce when moved. Control the movement of the Bass Drum when rolling the CBS-80 to prevent the Bass Drum from overturning or dropping.
- \*Use care when mounting the Bass Drum onto the Support Tubes to prevent fingers from getting between the Joint Bar of the Bass Drum and the Mounting Bracket or the Support Tube.
- \*Use care when handling the Connecting Tubes as the ends may be sharp.
- \*Do not leave the Bass Drum parallel to the ground. Return it to the upright position after use.
- \*Do not position the Bass Drum up side down.
- \*Set the Caster Brakes to the "ON" position to prevent the stand from creeping when playing.