

このたびは、オプティマウント・サスペンションシステムをお買い上げいただき誠にありがとうございます。製品の機能を十分に発揮してお使いいただくために、この取扱説明書をぜひ御覧下さい。

オプティマウント・サスペンションシステムは、タムタムの4ヶ所のラグナットに固定してタムタム本体を吊り下げることにより、フープやテンションボルトに負担をかけることなくタムタムの自然な鳴りを限りなく引き出す、パール独自のマウントシステムです。

OPTAシリーズオプティマウントは、下記の仕様のタムタムに取り付け可能です。

- 6"/4テンション
- 8"/5テンション
- 12"/6テンション
- 14"/8テンション
- 16"/8テンション
- 10"/6テンション
- 13"/6テンション

オプティマウントは、タムタムの深さに合わせた、5タイプが用意されています。

- OPTA-0708 (SS) ——— 7", 8"
- OPTA-0910 (S) ——— 9", 10"
- OPTA-1112 (M) ——— 11", 12"
- OPTA-1314 (L) ——— 13", 14"
- OPTA-1516 (LL) ——— 15", 16"

OptiMounts are designed to fit the following tom sizes:


- 6"/4 Tension
- 10"/6 Tension
- 13"/6 Tension
- 15"/8 Tension
- 8"/5 Tension
- 12"/6 Tension
- 14"/8 Tension
- 16"/8 Tension

OptiMounts are available in 5 models that fit the following depths:


- OPTA-0708 (SS) ——— 7", 8"
- OPTA-0910 (S) ——— 9", 10"
- OPTA-1112 (M) ——— 11", 12"
- OPTA-1314 (L) ——— 13", 14"
- OPTA-1516 (LL) ——— 15", 16"

取り付け方法


1. まずはじめに、タムタムのフープとヘッドを上下とも取り去ります。

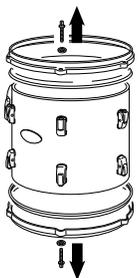


2. オプティマウントを取りつける4ヶ所のラグを選び、本体の両側にあるアレンスクリューをゆるめて調整バーを伸ばします。

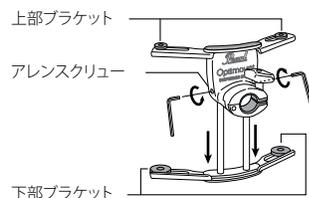


3. ブラケットのラバークッションをスライドさせながら、ラグナットにはめ込みます。その際は、上部のブラケットをまずセットしてから下部のブラケットをセットします。

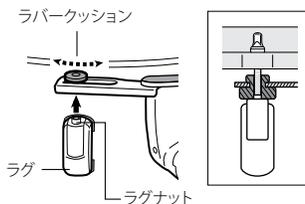

4. 上下4ヶ所のラグをブラケットではさみ込みながら、アレンスクリューを締めて固定します。

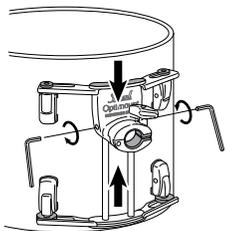

5. オプティマウント本体が、図のようにラグとラグの間の中心にくるよう、取り付けてください。

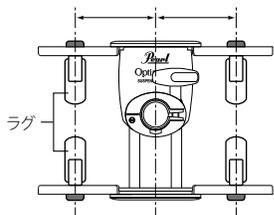

6. 上下のヘッドとフープを再びタムタムに組み込みます。これでオプティマウントの取り付けは完了です。



御使用上の注意 !

- オプティマウントはタムタムのサイズによって適合機種が異なりますので御注意下さい。
- タムスタンド等でタムタムをセッティングされる際は、オプティマウントが確実に装着されているかどうかを十分に確かめて下さい。
- オプティマウントの着脱は、床や机の上など、安定した場所で行なって下さい。
- オプティマウントでセッティングされているタムタムに、過度の負荷をかけないよう御注意下さい。特に、ドラム演奏以外での御使用はおやめ下さい。
- 演奏前にオプティマウントがしっかりとタム・ホルダーに装着されていることをご確認ください。
- ブラケットの取付部をぶつけたりしないで下さい。変形の恐れがあります。
- 上記注意を守らなかった場合、シェル本体に破損を及ぼす恐れがあります。

※製品改良のため予告なくデザイン・仕様を変更する場合がありますので御了承下さい。

パール株式会社 〒276-0034 千葉県八千代市八千代台西 10-2-1 TEL.047-484-9111(代)


Congratulations on your Pearl OptiMount purchase. OptiMounts feature Pearl's exclusive Suspension System that suspends toms by the lugs and tension rods for outstanding stability and maximum resonance. Please read this Instruction Manual for proper installation and optimum performance from your OptiMount.

Setting


1. Remove the hoop, tension rods, and drum head from both sides of the tom.




2. Loosen the Allen screws on both sides of the OptiMount and extend the Extension Rods far enough to clear the top and bottom lugs.

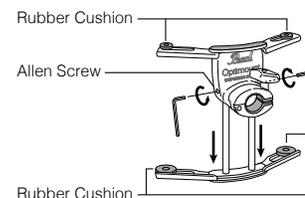


3. Slide the upper and lower Rubber Cushions and align them with the Lug Nuts as shown.

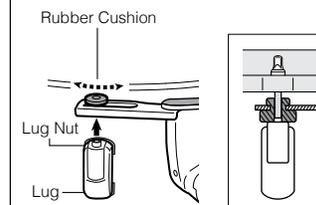

4. Squeeze the upper and lower OptiMount brackets securely against the lugs and tighten the Allen screws.

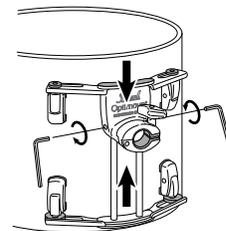

5. Make sure that the OptiMount is centered between the lugs.

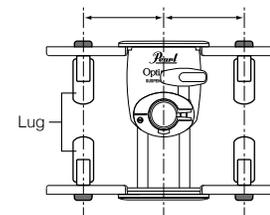

6. Replace the heads, hoops, and tension rods on the tom.



Caution !

- Use the proper OptiMount for the size, number of lugs, and depth of your drums (see the chart above).
- For safety, assemble and remove OptiMounts on a clean, stable surface such as a firm table or on the floor.
- Avoid excess pressure on OptiMount-equipped drums to prevent damage to the OptiMount and/or drums.
- Avoid hitting the OptiMount brackets to prevent dents in the brackets.
- Make sure that the OptiMounts are firmly locked to tom stands and tom holders before playing.
- Do not use OptiMounts for purposes other than holding drums.

Not following the above instructions will cause damage to the shells.